

Descaling the appliance



In order to ensure flawless function, the appliance must be descaled regularly also when using the water filter or when having very soft water. Depending on the water hardness and usage behaviour, even a monthly descaling may be necessary.





WARNING: Only descale the appliance when cold!

WARNING: Do not use vinegar! For decalcification we recommend to use a citrus descaler from a well-known manufacturer. Please follow the notes of the manufacturer.

WARNING: After descaling, the system must be rinsed thoroughly.

Descaling the coffee maker

- **Cleaning Reminder**
 - (h1) light flashes 1 sec on 1 sec off
- After brewing 60 pots of coffee, the light (h1) will flash slowly to alert the user to clean the machine
- Now follow the relevant instructions for descaling the coffee machine in the instruction manual (from p. 24).
- After user completes the cleaning process, user should turn the (h2) button right & left twice continuously to cancel the reminder.

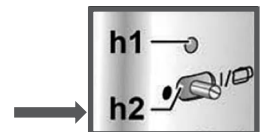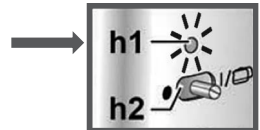

Descaling the espresso maker

- Follow the relevant instructions for descaling the coffee machine in the instruction manual (from p. 19).