



Before First Use

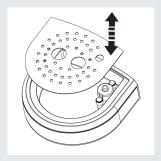

Put the external drip tray cover.




Insert the external drip tray.

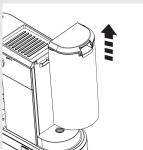


Lift the water tank.




Open the water tank cover.

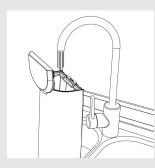


Fill the tank to "Max" Level.

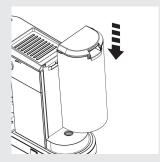

Place back the water tank into the machine.

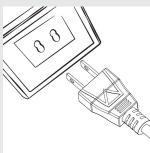

Connect the power cord to the mains supply outlet.

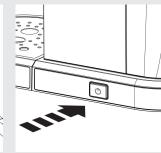

Press the power on/off button to switch on the unit.

Operation for serving coffee and frothy milk




Place a cup under the coffee



Select your desired coffee cups - 1cup or 2cups.




Place a cup under the steam

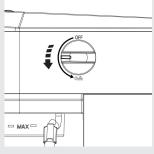

Turn on the hot water/steam Place the cup into filter holder.



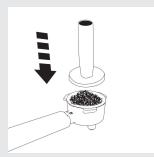

Gently compact the ground with Insert the filter holder. the tamper (the opposite end of the spoon)..





Turning filter holder to the LOCKED position..

Quick Start Guide

Flex 3-in-1 Espresso Coffee Machine



Coffee will come out from the coffee spout - one cup.



Coffee will come out from the coffee spout - two cup.



Place the ESE pot into filter holder.



Adjust well the ESE pod in filter holder.



Insert the filter holder.




Place the Nespresso®* capsule into filter holder for Nespresso®*.
*Nespresso® trademark is owned by Société des Produits Nestlé S.A.



Insert the filter holder.



Pull out the external drip tray for higher cup.

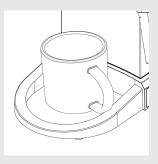

Place the higher cup under coffee spout.



Brew for bigger cup of coffee.



Adjust the steam tube location.




Start the milk foam cycle.



Residual coffee come from brew head.



Clean the residual coffee.

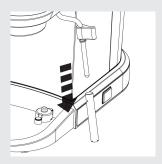

Remove the steam tube cover for clean.